

tuner=0 - Temic PAL (4002 FH5)
tuner=1 - Philips PAL_I (FI1246 and compatibles)
tuner=2 - Philips NTSC (FI1236,FM1236 and compatibles)
tuner=3 - Philips (SECAM+PAL_BG) (FI1216MF, FM1216MF, FR1216MF)
tuner=4 - NoTuner
tuner=5 - Philips PAL_BG (FI1216 and compatibles)
tuner=6 - Temic NTSC (4032 FY5)
tuner=7 - Temic PAL_I (4062 FY5)
tuner=8 - Temic NTSC (4036 FY5)
tuner=9 - Alps HSBH1
tuner=10 - Alps TSBE1
tuner=11 - Alps TSBB5
tuner=12 - Alps TSBE5
tuner=13 - Alps TSBC5
tuner=14 - Temic PAL_BG (4006FH5)
tuner=15 - Alps TSCH6
tuner=16 - Temic PAL_DK (4016 FY5)
tuner=17 - Philips NTSC_M (MK2)
tuner=18 - Temic PAL_I (4066 FY5)
tuner=19 - Temic PAL* auto (4006 FN5)
tuner=20 - Temic PAL_BG (4009 FR5) or PAL_I (4069 FR5)
tuner=21 - Temic NTSC (4039 FR5)
tuner=22 - Temic PAL/SECAM multi (4046 FM5)
tuner=23 - Philips PAL_DK (FI1256 and compatibles)
tuner=24 - Philips PAL/SECAM multi (FQ1216ME)
tuner=25 - LG PAL_I+FM (TAPC-I001D)
tuner=26 - LG PAL_I (TAPC-I701D)
tuner=27 - LG NTSC+FM (TPI8NSR01F)
tuner=28 - LG PAL_BG+FM (TPI8PSB01D)
tuner=29 - LG PAL_BG (TPI8PSB11D)
tuner=30 - Temic PAL* auto + FM (4009 FN5)
tuner=31 - SHARP NTSC_JP (2U5JF5540)
tuner=32 - Samsung PAL TCPM9091PD27
tuner=33 - MT20xx universal
tuner=34 - Temic PAL_BG (4106 FH5)
tuner=35 - Temic PAL_DK/SECAM_L (4012 FY5)
tuner=36 - Temic NTSC (4136 FY5)
tuner=37 - LG PAL (newer TAPC series)
tuner=38 - Philips PAL/SECAM multi (FM1216ME MK3)
tuner=39 - LG NTSC (newer TAPC series)
tuner=40 - HITACHI V7-J180AT
tuner=41 - Philips PAL_MK (FI1216 MK)
tuner=42 - Philips 1236D ATSC/NTSC dual in
tuner=43 - Philips NTSC MK3 (FM1236MK3 or FM1236/F)
tuner=44 - Philips 4 in 1 (ATI TV Wonder Pro/Conexant)
tuner=45 - Microtune 4049 FM5